

FITMENT INSTRUCTIONS



NISSAN NP300 DOUBLE CAB

RHINOLITE & COMMERCIAL

FITMENT KIT CONTENTS

DESCRIPTION	QUANTITY	ILLUSTRATION
• M8 x 20 Bolt	8	
• M8 x 25 Bolt	6	
• M8 x 40 Bolt	2	
• M8 Nylock Nut	14	
• M8 Flat Washer	20	
• M8 Body Washer	10	
• M8 Spring Washer	4	
• M10 x 25 Bolt	2	
• M10 Body Washer	2	
• M10 Spring Washer	2	
• Cab Side Bracket Inner	2	
• Cab Side Bracket Outer	2	
• Tail Gate Bracket LH	1	
• Tail Gate Bracket RH	1	
• Tail Gate Bracket Inner	2	

REQUIRED TOOLS

DESCRIPTION	ILLUSTRATION
• 13mm Spanner • 13mm Socket Wrench (Optional) • 17mm Spanner • 17mm Socket Wrench (Optional) • Drill • 9mm Drill bit	

INSTALLATION TIME & CARE INSTRUCTIONS

Approx. 45 Minutes (Excluding the removal of any accessories from load bin)

- ✓ Before installation, ensure that your hands and workwear are clean from oil, grime & dirt.
- ✓ Ensure that the correct tools and PPE are used whilst installing the canopy. Clean the rear cab window before fitting the canopy.
- ✓ Torque all M8 fasteners to approx. 28Nm.
- ✓ Torque all M10 fasteners to approx. 56Nm.

FITMENT STEPS

STEP 1


- ✓ Unpack all components and hardware from packaging. Ensure that everything is accounted for as indicated above.

STEP 2

- ✓ Remove any cab guards, roll bar, tonneau cover, sports bar etc. from vehicle.

STEP 3

- ✓ Remove the factory fitted tie-down hooks.
- ✓ Insert & align the cab side bracket with the front M8 hole located closest to the cab on the wheel arch.
- ✓ Insert & align the Tail gate side brackets with the rear tie down fastening points.
- ✓ Drill a Ø9mm hole into the load box, center to the bottom hole on the tail gate bracket. Ensure that there are no obstructions below the load box prior to drilling.
- ✓ Secure brackets with provided bolts on the OEM tie-down points & newly drilled holes.
- ✓ Ensure that the rear cab window of the vehicle is clean, before loading the canopy onto the load bin.

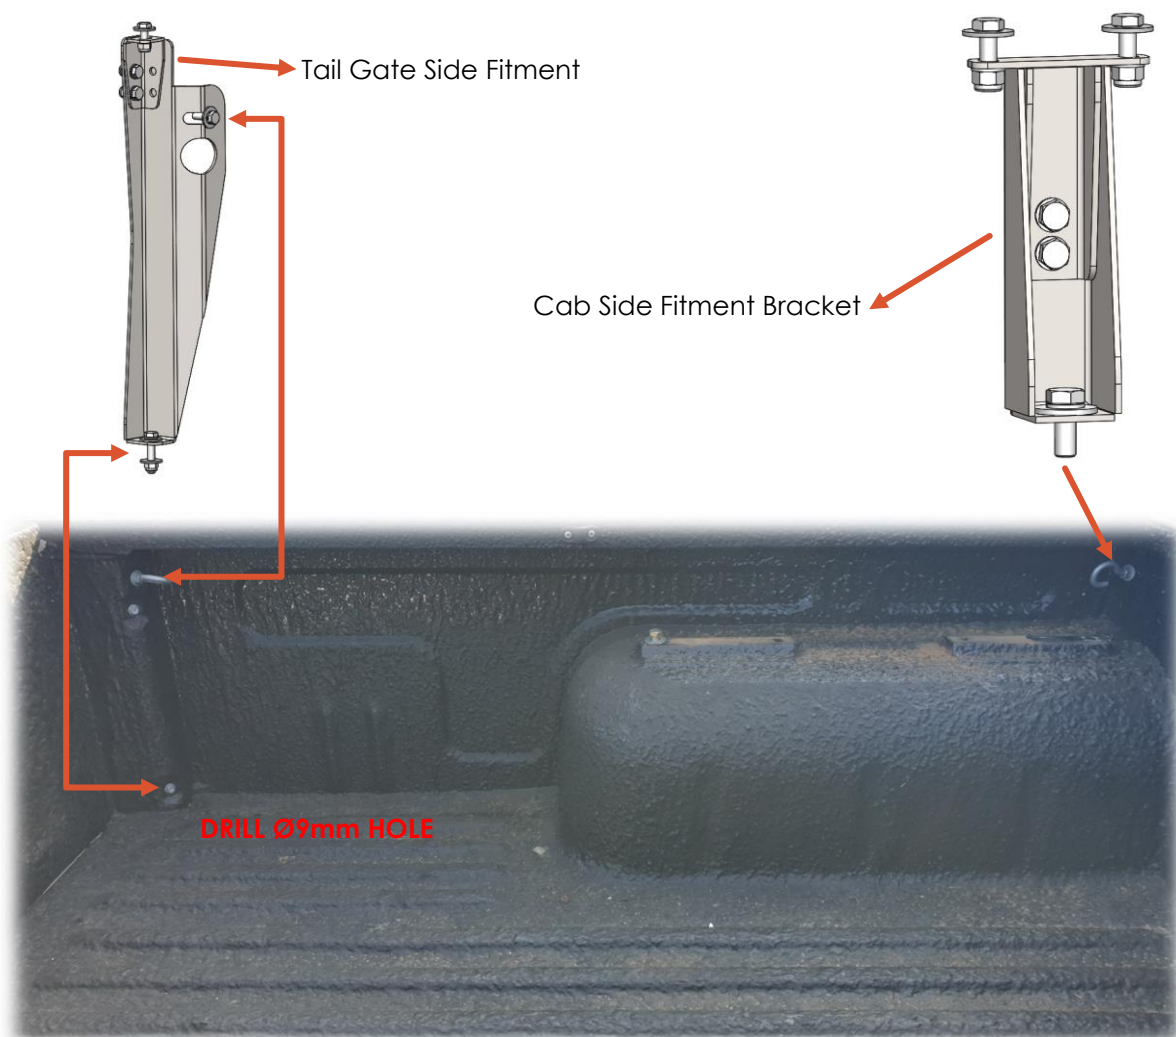

STEP 4

- ✓ Fit the canopy to the loading bin, align & space evenly.
- ✓ Line-up the canopy fastening points with the brackets' fastening points. (Fig. 1).

- ✓ When the canopy is resting on the load bin, adjust the brackets to achieve a gap of approx. 6mm between the canopy fastening surface and the bracket top surface. (Fig2.)
- ✓ Once the canopy is aligned and in place, use a black marker to mark the hole positions of the fitment brackets. Once all 4 x corners are marked, drill a Ø9mm hole into the side trim through the vehicle load box edge.
- ✓ Secure the brackets to the load body by fastening the bolts slowly & securely.
- ✓ Secure the canopy to the brackets using the bolts supplied, tighten the bolts to secure the two surfaces firmly, into the factory supplied threaded holes.

FIG 1.


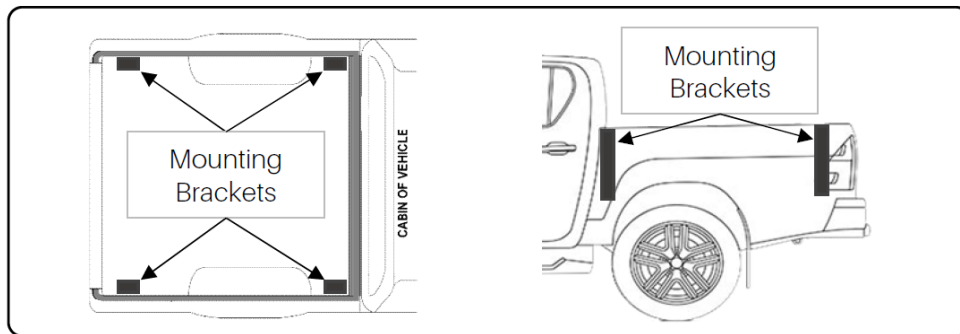


FIG 2.

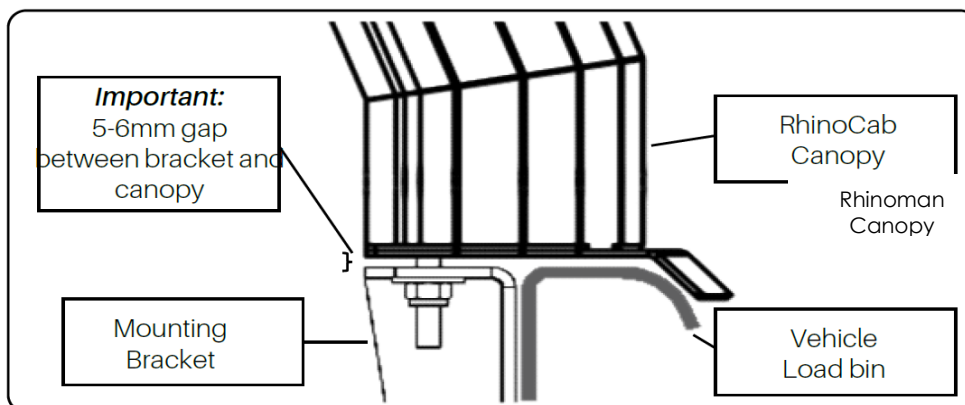

STEP 5

- ✓ Trim sealing rubber on tailgate with knife or scissors.
- ✓ Check again for alignment of canopy on sides of loading bin.
- ✓ Check all bolts one final time.
- ✓ Enjoy your NEW Rhinoman all Aluminum Canopy.

WARRANTY SERVICE & CARE GUIDE

- ✓ All Rhinoman products carry a comprehensive 2-year factory warranty.
- ✓ **PLEASE NOTE:** Your canopy will only be covered under warranty if it has been fitted by an approved Rhinoman fitment center or agent.
- ✓ Please do inspect the fasteners on the fitment brackets every once in a while, to ensure that all bolts are still tight and properly secured.

SHOULD YOU HAVE ANY ENQUIRIES ABOUT THE FITMENT, FEEL FREE TO CONTACT US