





## FITMENT INSTRUCTIONS



## SINGLE CAB – RHINOLITE

APPLICABLE TO: HILUX (VIGO &amp; REVO) – NISSAN NP300 – VW AMAROK

## FITMENT KIT CONTENTS

DESCRIPTION	QUANTITY	ILLUSTRATION
• M8 x 25 Bolt	4	
• M8 Nylock Nut	4	
• M8 Flat Washer	4	
• M8 Body Washer	4	

## REQUIRED TOOLS

DESCRIPTION	ILLUSTRATION
• 13mm Spanner	
• 13mm Socket Wrench (Optional)	
• Marker	
• Drill	
• Ø9 Drill Bit	

## INSTALLATION TIME &amp; CARE INSTRUCTIONS

Approx. 45 Minutes (Excluding the removal of any accessories from load bin)

- ✓ Before installation, ensure that your hands and workwear are clean from oil, grime & dirt.
- ✓ Ensure that the correct tools and PPE are used whilst installing the canopy. Clean the rear cab window before fitting the canopy.
- ✓ Torque all M8 fasteners to approx. 28Nm.

## FITMENT STEPS

## STEP 1

- ✓ Unpack all fasteners from packaging: ensure that everything is accounted for as indicated above.
- ✓ Prepare all required tools as listed above.


## STEP 2

- ✓ Remove any cab guards, roll bar, tonneau cover, sports bar etc. from vehicle.
- ✓ Ensure that the rear cab window of the vehicle is clean, before loading the canopy onto the load bin.

## STEP 3

- ✓ Fit the canopy to the loading bin, align & space evenly, with a minimum distance of 25mm between the front panel of the canopy and the cab.(Fig. 1)
- ✓ Mark and drill a Ø9mm hole in each corner of the canopy right through the vehicle load box, in line with the center of the load box edge.
- ✓ Once all 4 x corners are drilled, secure the canopy to the load box using the bolts supplied, with the body washer on the top, and flat washer below.

FIG 1.

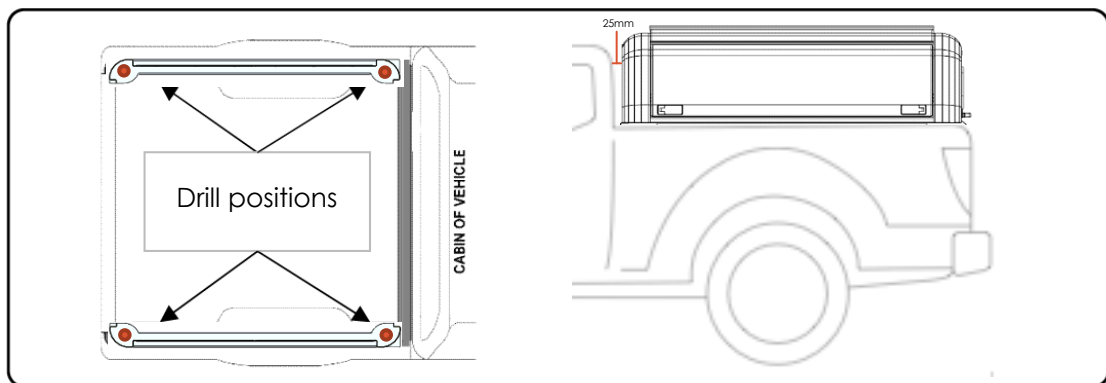

## STEP 4

- ✓ Trim sealing rubber on tailgate with knife or scissors.
- ✓ Check again for alignment of canopy on sides of loading bin.
- ✓ Check all bolts one final time.
- ✓ Enjoy your NEW Rhinoman all Aluminum Canopy.

## WARRANTY SERVICE &amp; CARE GUIDE

- ✓ All Rhinoman products carry a comprehensive 2-year factory warranty.
- ✓ **PLEASE NOTE:** Your canopy will only be covered under warranty if it has been fitted by an approved Rhinoman fitment center or agent.
- ✓ Please do inspect the fasteners on the fitment brackets every once in a while, to ensure that all bolts are still tight and properly secured.

SHOULD YOU HAVE ANY ENQUIRIES ABOUT THE FITMENT, FEEL FREE TO CONTACT US



010 010 0060



SALES@RHINOMAN.CO.ZA



RHINOMAN.CO.ZA