



Ammo box rack lock box

Fitment guide for small and large lock box.



CONTENTS


1. Getting Started:	2
1.1. Product contents:	2
2. Ammo box rack lock box fitment guide:	3
2.1. Tools required for fitment:	3
2.2. Step 1 – Prepare the ammo box rack for fitment:	3
2.3. Step 2 – Place the lock box in position:	4
3. Notes:	5

SHOULD YOU HAVE ANY ENQUIRIES ABOUT THE FITMENT, FEEL FREE TO CONTACT US



1. Getting Started:

1.1. Product contents:

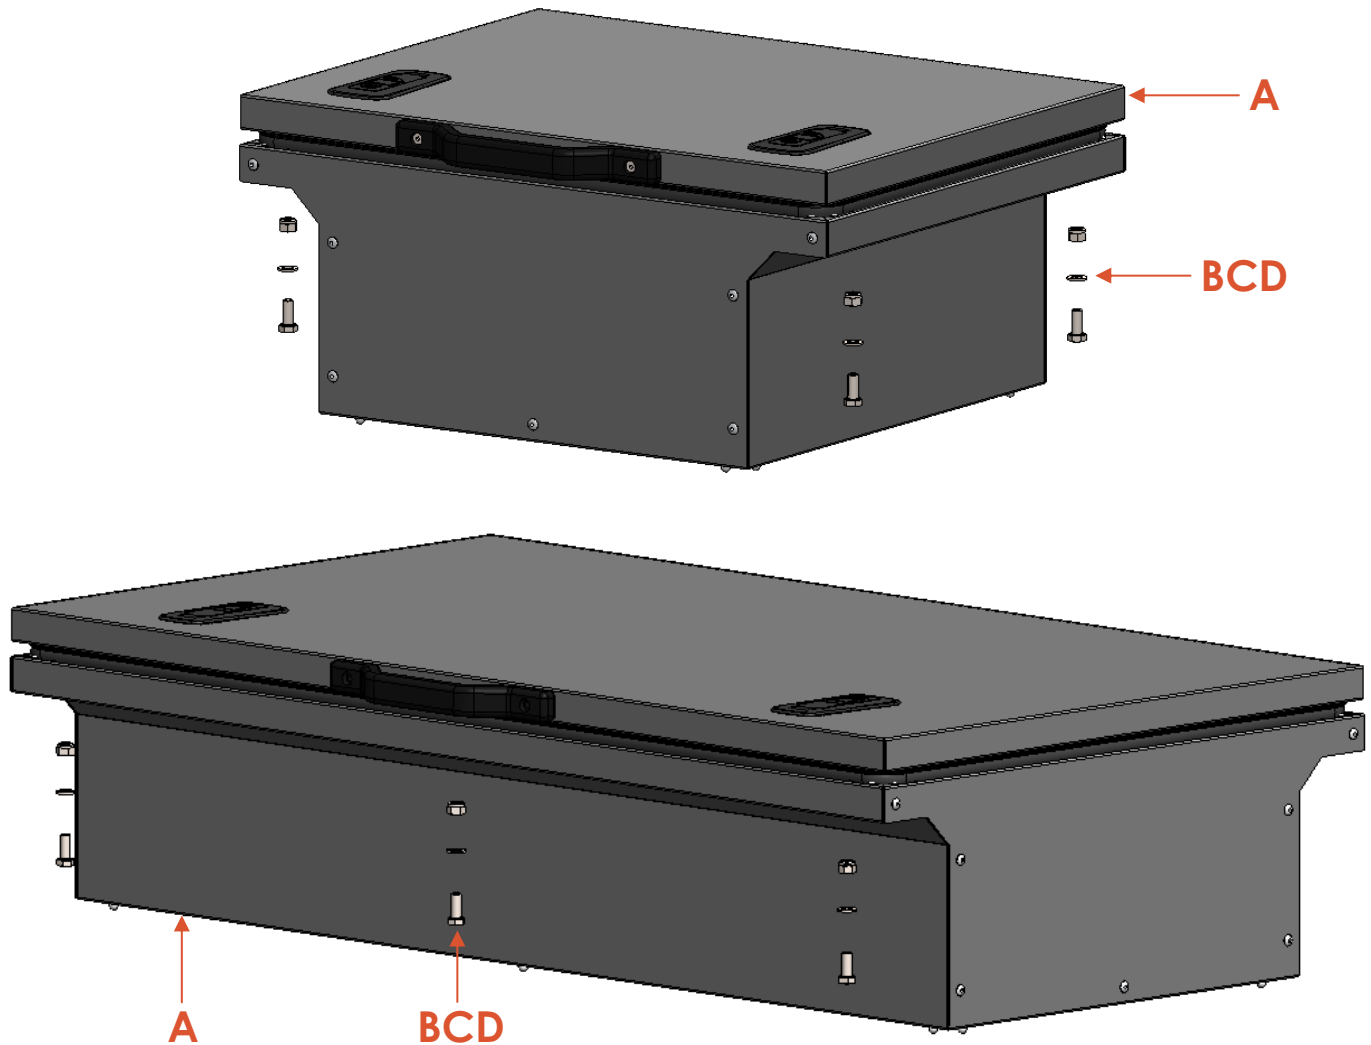

	<u>Small lock box</u>	<u>Large lock box</u>
A. Lock box assembly	x 1	x 1
B. M8 x 20 Hexagonal screw	x 4	x 6
C. M8 Flat washer	x 4	x 6
D. M8 Nyloc nut	x 4	x 6

SHOULD YOU HAVE ANY ENQUIRIES ABOUT THE FITMENT, FEEL FREE TO CONTACT US

2. Ammo box rack lock box fitment guide:



Be aware of the edges on all sheet metal components and take extra care during handling.

Ensure that the area where the lock box will be installed is free from any obstructions.

**PLEASE
NOTE...**

Torque all M8 fasteners to 28.4 Nm.

2.1. Tools required for fitment:

COMBINATION WRENCH



- 1 x 13mm Spanner

SOCKET WRENCH



- 1 x 13mm Socket

2.2. Step 1 – Prepare the ammo box rack for fitment:

- Ensure that the desired position will not cause any obstruction when using the lid.
- **For the small lock box:** Slide 2 x M8 x 20 hexagonal screws into each top rail on the sides of the ammo box rack. Confirm the spacing between the screws. Fig. 2.2.1
- **For the large lock box:** Slide 3 x M8 x 20 hexagonal screws into each top rail on the side of the ammo box rack. Confirm the spacing between the screws. Fig. 2.2.2

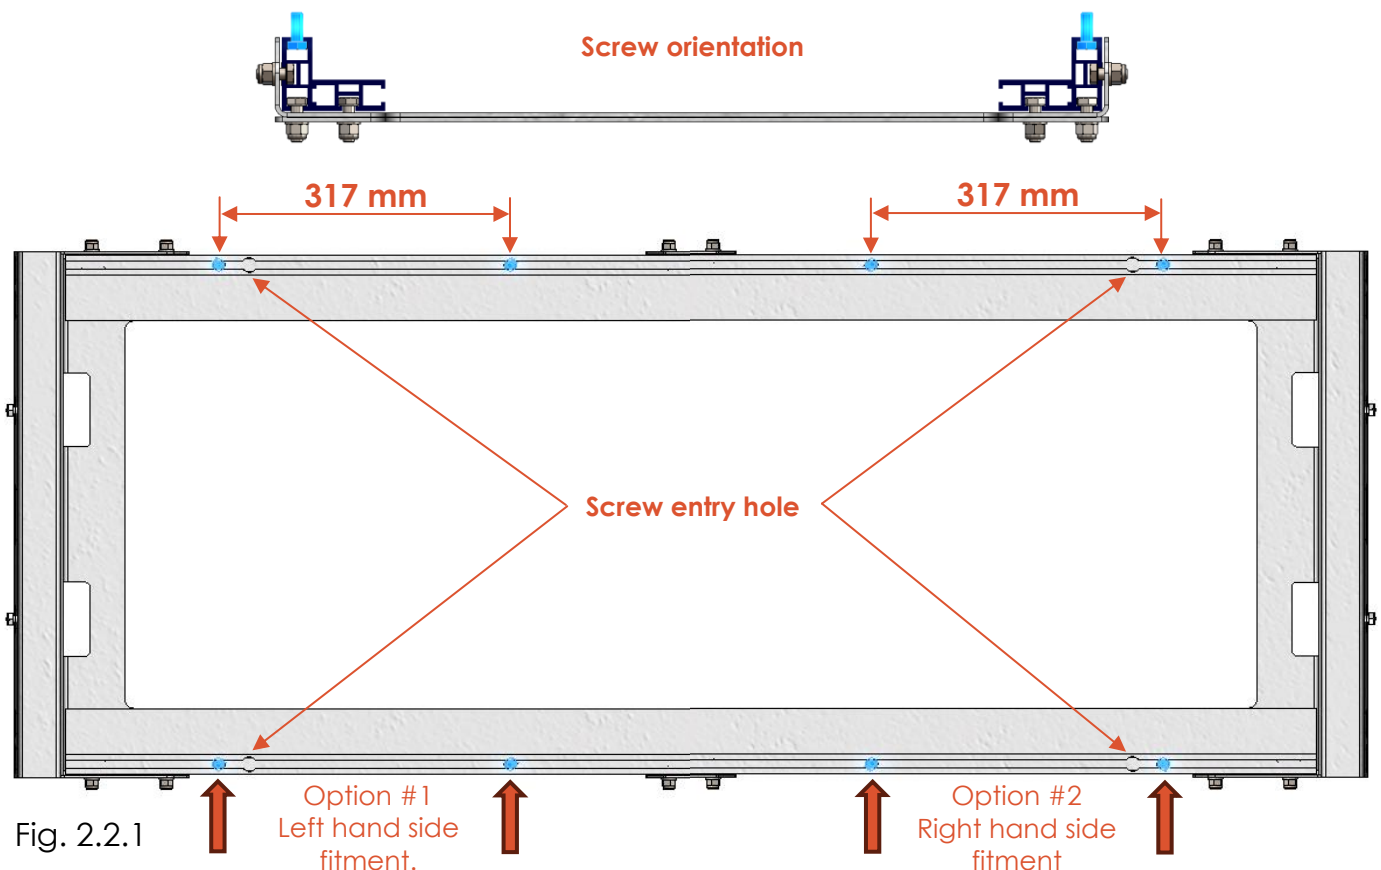


Fig. 2.2.1

SHOULD YOU HAVE ANY ENQUIRIES ABOUT THE FITMENT, FEEL FREE TO CONTACT US

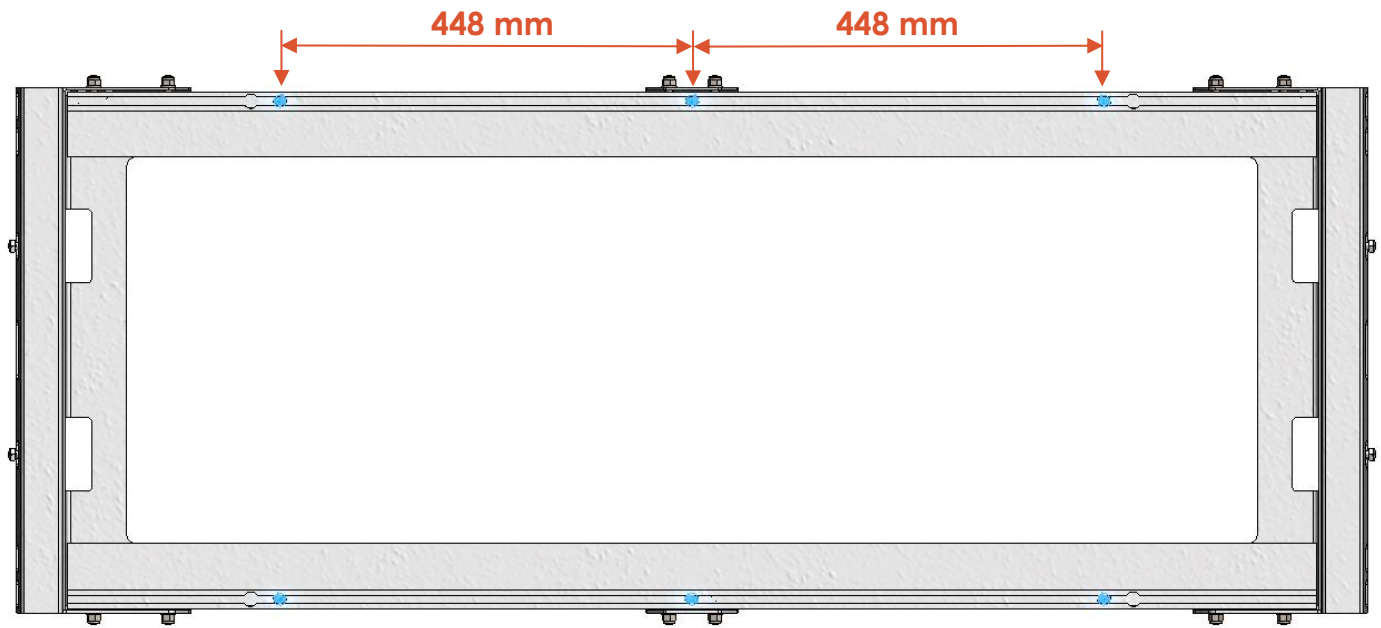


Fig. 2.2.2

2.3. Step 2 – Place the lock box in position:

- Familiarize yourself with the underside dedicated for the fitment screws. Fig. 2.3.1
- Place the lock box into the ammo box rack with the screws entering the dedicated fitment holes. Fig. 2.3.2
- Once the lock box is resting on top of the ammo box rack with the position confirmed, secure the lock box with 1 x M8 flat washer and 1 x M8 nyloc nut on each screw. Fig. 2.3.3

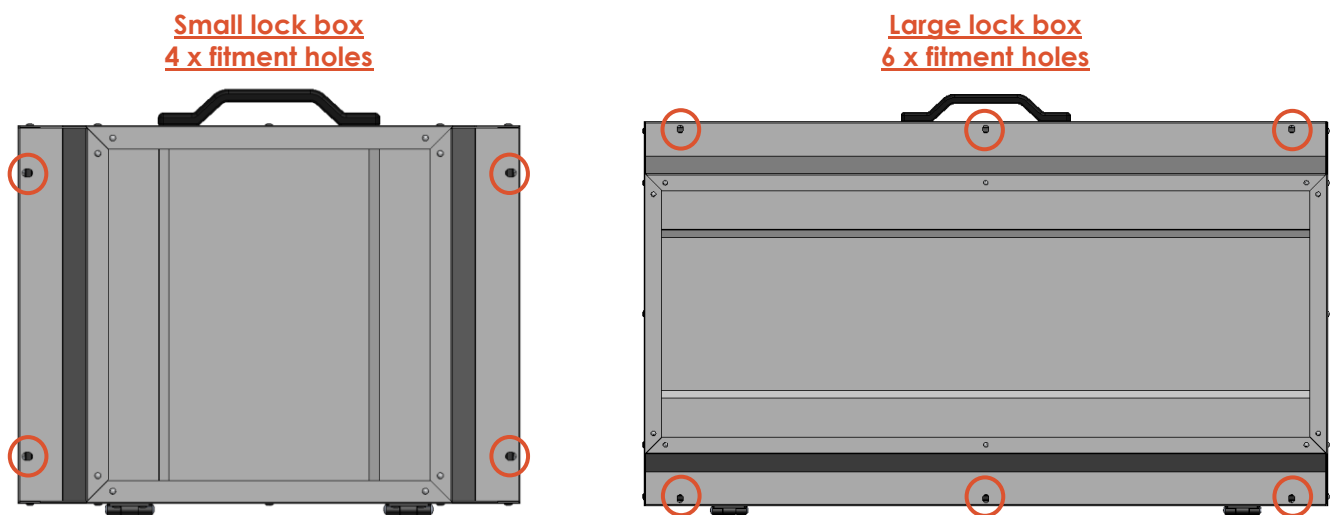


Fig. 2.3.1

Bottom view of the lock box

SHOULD YOU HAVE ANY ENQUIRIES ABOUT THE FITMENT, FEEL FREE TO CONTACT US

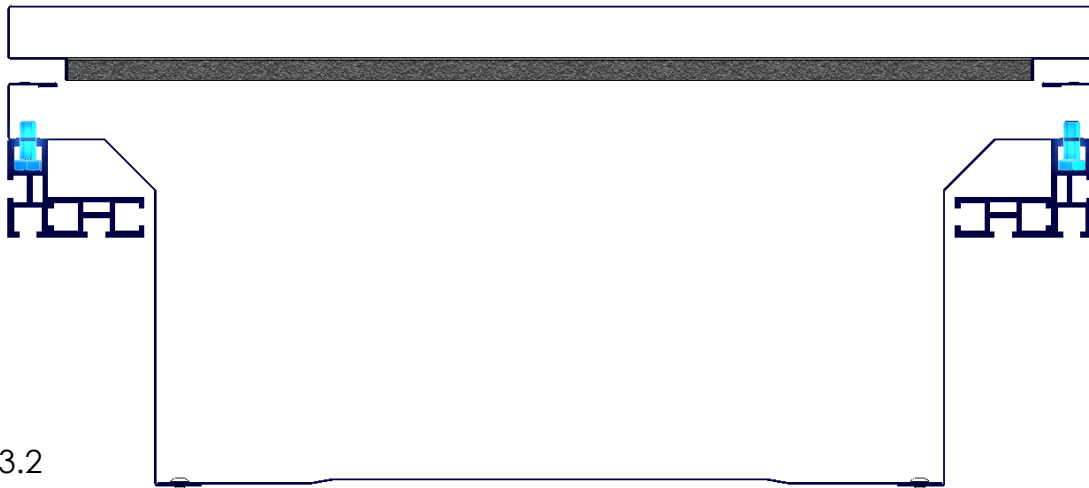


Fig. 2.3.2

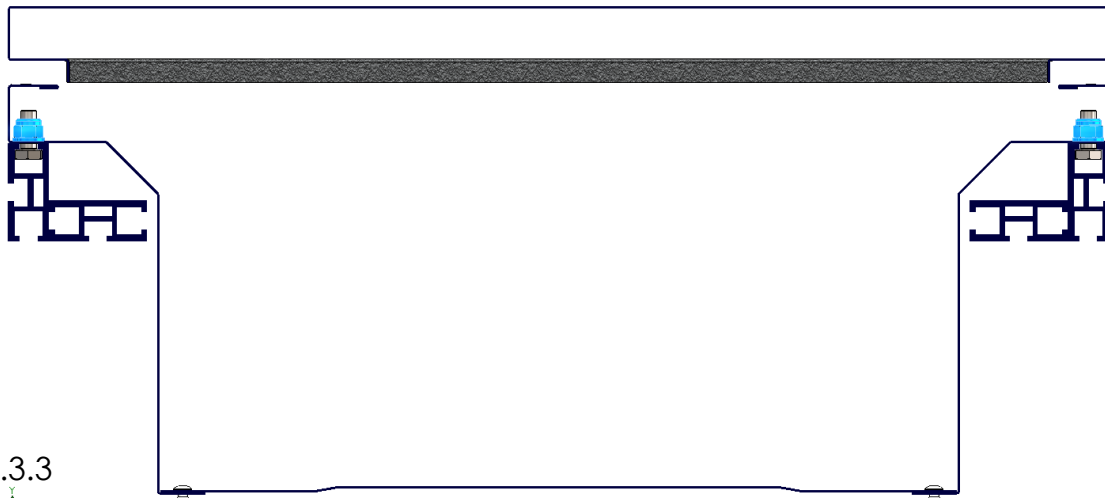


Fig. 2.3.3

3. Notes:

- You have now successfully completed the fitment of your Rhinoman lock box.
- Confirm that all the fitment screws have been properly tightened one last time.
- Be sure to check at least bi-monthly that all the screws are still properly tightened.

SHOULD YOU HAVE ANY ENQUIRIES ABOUT THE FITMENT, FEEL FREE TO CONTACT US